IF1200 HEXACOPTER

Battery Charging Guide

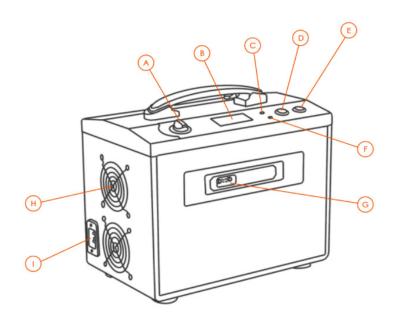




TABLE OF CONTENTS

1. Battery Charger Diagram	2
2. Charging Instructions	3
3. Balancing Instructions	4
4. Storage Mode	5
5. Troubleshooting	6

CHARGER DIAGRAM



- (A) CHARGE MODE DIAL (F) STORAGE INDICATOR LED
- **B** LCD DISPLAY

- **G** BATTERY OUTPUT PORT
- C CHARGE INDICATOR LED H COOLING FANS
- D CHARGE BUTTON I POWER INPUT PORT
- **E** STORAGE BUTTON

2 BATTERY CHARGING



- STEP 1: Plug the included power cable into the charger and plug it into an outlet
- STEP 2: Press the power button on the side of the battery charger to power on the unit.
- STEP 3: Adjust the charge mode dial to one of three options: Trickle, Standard, & Fast. It is recommended to charge the batteries on Trickle if timing isn't an issue.
- **STEP 4:** Uncap the battery and plug into either side of the charger.
- STEP 5: Once connected, the battery will start a countdown of 10 seconds, and then will begin charging automatically.
- STEP 6: Cell voltages and battery levels are indicated on the LCD screen.
- STEP 7: When the battery is fully charged, each individual voltage should be about 4.20 Volts, and the charger will display 'Fully Charged'.
- STEP 8: If a partially charged battery is needed, first power down the charger by pressing the 'On/Off' button, then unplug the battery to avoid an error message displayed on the screen.

3 BATTERY BALANCING



- STEP 1: Once every 10 cycles, or whenever red triangular lights are lit up on the battery, a balanced charge is recommended to make all cell voltages the same.
- STEP 2: When the battery is connected to the charger, individual cell voltages will be displayed on the LCD screen.
- **STEP 3:** Connect each end of the black balance cable into the corresponding balance ports on the unplugged battery & powered-on charger.
- **STEP 4:** Follow the standard charging instructions above to conduct a balanced charge.

STORAGE MODE



- **STEP 1:** If a battery will be shipped or will not be used for long periods of time, it is highly recommended that the battery is placed into storage mode.
- **STEP 2:** Depending on the current battery percentage, placing the battery into storage mode will either charge or discharge the battery to a voltage that is most stable for shipping and sitting for long periods of time.
- **STEP 3:** Plug the main connector into the charger and hold the storage button for 5 seconds.
- STEP 4: The charger will beep, fans will begin to spin, and the LCD screen will indicate that storage mode has begun.

5

TROUBLESHOOTING

STEP 1: If an error message appears on the screen, unplug the battery and press the 'Charge' button to reset the interface.

